

# The BackSaver by CushGear

## Plastic Bucket Seat Installation

*Attention: This BackSaver will not work on older fiberglass bucket seats. Plastic bucket seats are standard on newer canoes. They always mount with pop rivets. (Fig. 3) If you have a fiberglass bucket seat, contact your dealer or CushGear for a model to meet your application.*

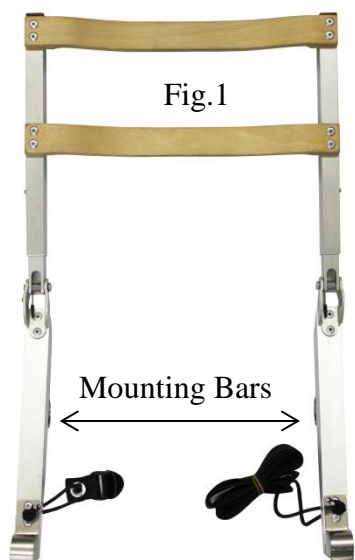


Fig. 1

Mounting Bars

1. From a position behind the seat point the mounting brackets and straps down between the two poles the seat is mounted to. (Fig. 1)
2. Line up the front and rear spring clips on each side and push the clips onto the front and rear pole at the same time. (Fig. 2)



Fig. 2

3. Remove the rubber band from the strap. Bring the strap and buckle under the front pole and around the front. The strap cords lock the BackSaver into its seat by wrapping around the front pole. (Fig. 3)



Fig. 3

Pop Rivets

4. Pass the strap through the two guides on the back of the frame and down through the tension buckle. (Fig. 4 & Fig. 5) Keep the strap flat to avoid any twists.

5. If properly installed the BackSaver will freely pivot on its hinges and the springs will hold it in an upright position. (Fig. 4) The strap can also be pulled all the way through the tension buckle until the BackSaver is pulled down flat on the seat for portage or storage. (Fig. 6)

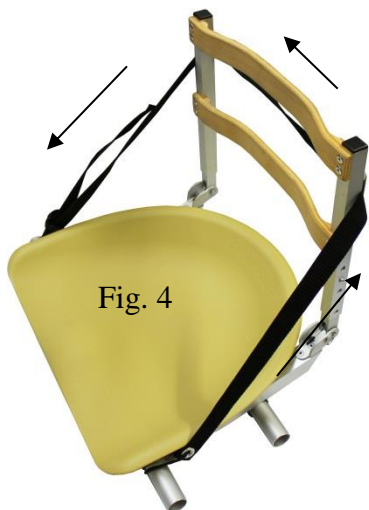


Fig. 4

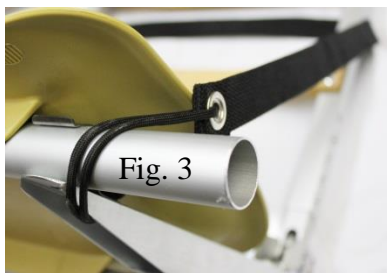


Fig. 3



Fig. 6



Fig. 5

### Other Mounting Options

- A. Two screws are supplied for the most permanent secure mount. There is a hole in the back of each spring clip. Drill a 1/8 inch pilot hole in the tube and add the screws.

[www.cushgear.com](http://www.cushgear.com)

612-839-2329

*There is no honor in needless suffering! Go Cush.*